


**SIEMENS**

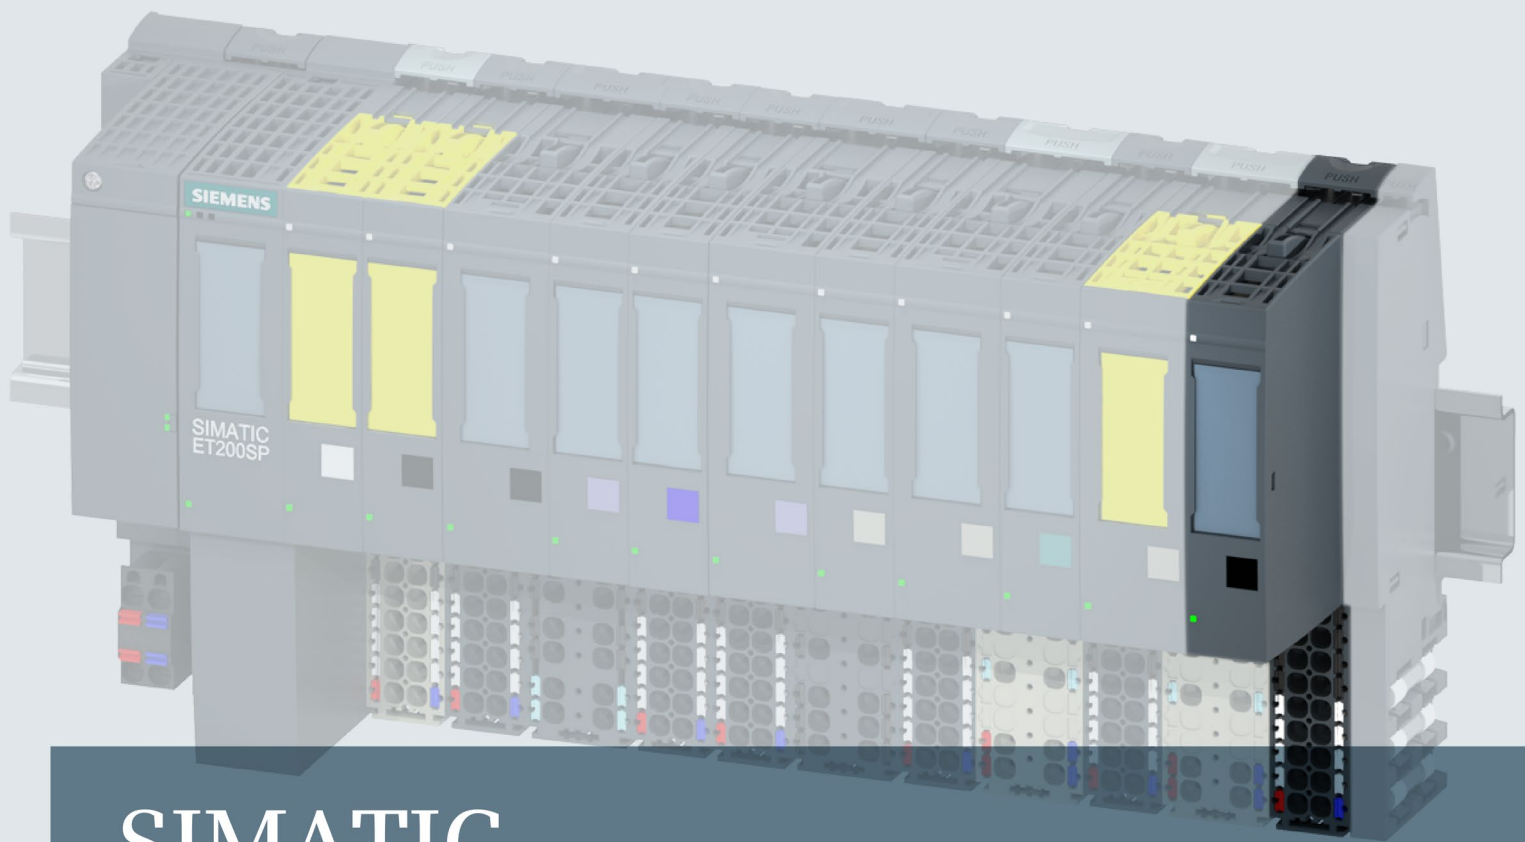

# SIMATIC

## ET 200SP

Digital output module DQ 16x24VDC/0.5A ST (6ES7132-6BH00-0BA0)

Manual

Edition

12/2015

Answers for industry.

# SIEMENS

## SIMATIC

### ET 200SP

Digital output module  
DQ 16x24VDC/0.5A ST  
(6ES7132-6BH00-0BA0)

Manual

Preface

---

Documentation guide

1

Product overview

2

Connecting

3

Parameters/address space

4

Interrupts/diagnostic alarms

5

Technical specifications

6




Parameter data record

A

## Legal information

### Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

 <b>DANGER</b>
indicates that death or severe personal injury <b>will</b> result if proper precautions are not taken.
 <b>WARNING</b>
indicates that death or severe personal injury <b>may</b> result if proper precautions are not taken.
 <b>CAUTION</b>
indicates that minor personal injury can result if proper precautions are not taken.
<b>NOTICE</b>
indicates that property damage can result if proper precautions are not taken.


If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

### Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

### Proper use of Siemens products

Note the following:

 <b>WARNING</b>
Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

### Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

### Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

# Preface

## Purpose of the documentation

This manual supplements the ET 200SP distributed I/O system (<http://support.automation.siemens.com/WW/view/en/58649293>) system manual.

Functions that generally relate to the system are described in this system manual.

The information provided in this manual and in the system/function manuals supports you in commissioning the system.

## Conventions

**CPU:** When the term "CPU" is used in this manual, it applies to the CPUs of the S7-1500 automation system as well as to the CPUs/interface modules of the ET 200SP distributed I/O system.

**STEP 7:** In this documentation, "STEP 7" is used as a synonym for all versions of the configuration and programming software "STEP 7 (TIA Portal)".

Please also observe notes marked as follows:

---

### Note

A note contains important information on the product described in the documentation, on the handling of the product or on the section of the documentation to which particular attention should be paid.

---

## Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, solutions, machines, equipment and/or networks. They are important components in a holistic industrial security concept. With this in mind, Siemens' products and solutions undergo continuous development. Siemens recommends strongly that you regularly check for product updates.

For the secure operation of Siemens products and solutions, it is necessary to take suitable preventive action (e.g. cell protection concept) and integrate each component into a holistic, state-of-the-art industrial security concept. Third-party products that may be in use should also be considered. You can find more information about industrial security on the Internet (<http://www.siemens.com/industrialsecurity>).

To stay informed about product updates as they occur, sign up for a product-specific newsletter. You can find more information on the Internet (<http://support.automation.siemens.com>).


# Table of contents

	<b>Preface .....</b>	<b>4</b>
<b>1</b>	<b>Documentation guide .....</b>	<b>6</b>
<b>2</b>	<b>Product overview .....</b>	<b>9</b>
	2.1 Properties.....	9
<b>3</b>	<b>Connecting .....</b>	<b>11</b>
	3.1 Wiring and block diagram .....	11
<b>4</b>	<b>Parameters/address space .....</b>	<b>13</b>
	4.1 Parameters .....	13
	4.2 Declaration of parameters .....	15
	4.3 Address space .....	16
<b>5</b>	<b>Interrupts/diagnostic alarms .....</b>	<b>18</b>
	5.1 Status and error display .....	18
	5.2 Interrupts .....	20
	5.3 Diagnostic messages .....	21
<b>6</b>	<b>Technical specifications .....</b>	<b>22</b>
	6.1 Technical specifications .....	22
<b>A</b>	<b>Parameter data record .....</b>	<b>27</b>
	A.1 Parameter assignment and structure of parameter data record.....	27

## Documentation guide

The documentation for the SIMATIC ET 200SP distributed I/O system is arranged into three areas.

This arrangement enables you to access the specific content you require.

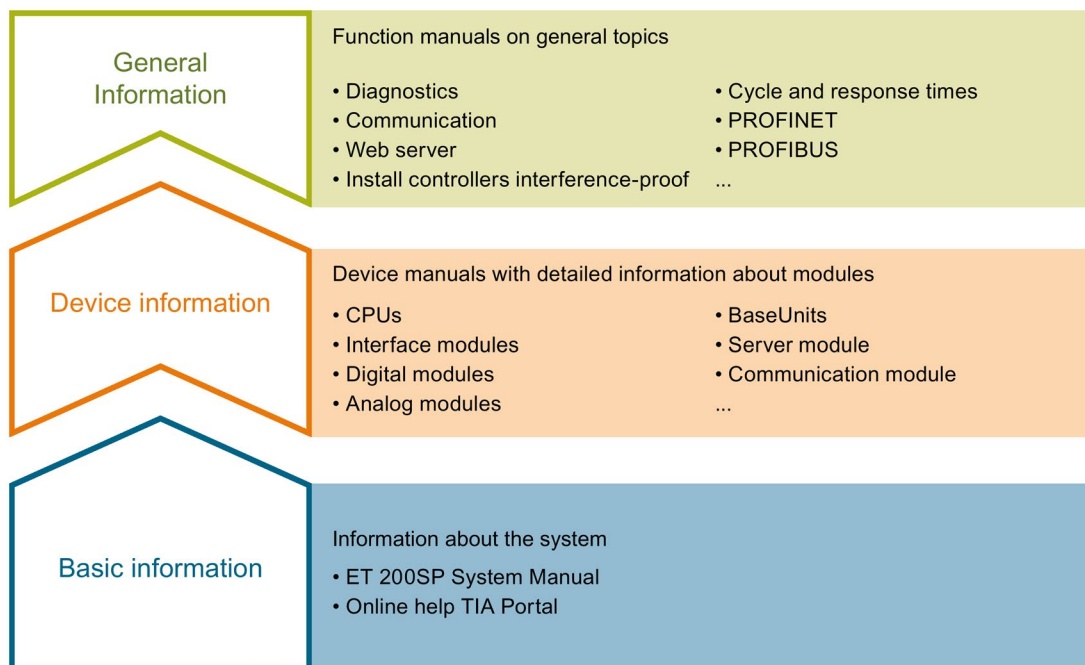

### Basic information

The system manual describes in detail the configuration, installation, wiring and commissioning of the SIMATIC ET 200SP. distributed I/O system. The STEP 7 online help supports you in the configuration and programming.

### Device information

Product manuals contain a compact description of the module-specific information, such as properties, terminal diagrams, characteristics and technical specifications.

### General information

The function manuals contain detailed descriptions on general topics regarding the SIMATIC ET 200SP distributed I/O system, e.g. diagnostics, communication, Web server, designing interference-free controllers.

You can download the documentation free of charge from the Internet (<http://w3.siemens.com/mcms/industrial-automation-systems-simatic/en/manual-overview/tech-doc-et200/Pages/Default.aspx>).

Changes and supplements to the manuals are documented in a Product Information.

You can download the product information free of charge from the Internet (<https://support.industry.siemens.com/cs/us/en/view/73021864>).

## Manual Collection ET 200SP

The Manual Collection contains the complete documentation on the SIMATIC ET 200SP distributed I/O system gathered together in one file.

You can find the Manual Collection on the Internet (<http://support.automation.siemens.com/WW/view/en/84133942>).

## "mySupport"

With "mySupport", your personal workspace, you make the most of your Industry Online Support.

In "mySupport" you can store filters, favorites and tags, request CAx data and put together your personal library in the Documentation area. Furthermore, your data is automatically filled into support requests and you always have an overview of your current requests.

You need to register once to use the full functionality of "mySupport".

You can find "mySupport" in the Internet (<https://support.industry.siemens.com/My/ww/en>).

## "mySupport" - Documentation

In the Documentation area of "mySupport", you have the possibility to combine complete manuals or parts of them to make your own manual.

You can export the manual in PDF format or in an editable format.

You can find "mySupport" - Documentation in the Internet (<http://support.industry.siemens.com/My/ww/en/documentation>).

## "mySupport" - CAx Data

In the CAx Data area of "mySupport", you can have access the latest product data for your CAx or CAe system.

You configure your own download package with a few clicks.

In doing so you can select:

- Product images, 2D dimension drawings, 3D models, internal circuit diagrams, EPLAN macro files
- Manuals, characteristics, operating manuals, certificates
- Product master data

You can find "mySupport" - CAx Data in the Internet (<http://support.industry.siemens.com/my/ww/en/CAxOnline>).

## Application examples

The application examples support you with various tools and examples for solving your automation tasks. Solutions are shown in interplay with multiple components in the system - separated from the focus in individual products.

You can find the application examples on the Internet (<https://support.industry.siemens.com/sc/ww/en/sc/2054>).

## **TIA Selection Tool**

With the TIA Selection Tool, you can select, configure and order devices for Totally Integrated Automation (TIA).

This tool is the successor of the SIMATIC Selection Tool and combines the known configurators for automation technology into one tool.

With the TIA Selection Tool, you can generate a complete order list from your product selection or product configuration.

You can find the TIA Selection Tool on the Internet

(<http://w3.siemens.com/mcms/topics/en/simatic/tia-selection-tool>).



## Product overview


### 2.1 Properties

#### Article number

6ES7132-6BH00-0BA0 (packaging unit: 1 unit)

6ES7132-6BH00-2BA0 (packaging unit: 10 units)

#### View of the module

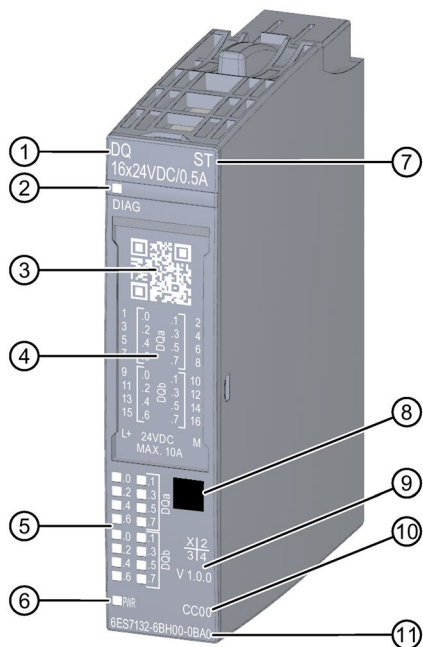

- |                           |  |
|---------------------------|--|
| ① Module type and name    | ⑦ Function class   |
| ② LED for diagnostics     | ⑧ Color coding module type                                 |
| ③ 2D matrix code          | ⑨ Function and firmware version                            |
| ④ Wiring diagram          | ⑩ Color code for selecting the color identification labels |
| ⑤ LEDs for channel status | ⑪ Article number   |
| ⑥ LED for supply voltage  |  |

Image 2-1 View of the module DQ 16x24VDC/0.5A ST

## Properties

The module has the following technical properties:

- Digital output module with 16 outputs
- Source output (PNP, P-switching)
- Supply voltage L+
- Output current 0.5 A (per channel), total current max. 8 A (see derating: Technical specifications (Page 22))
- Configurable diagnostics (per module)
- Configurable substitute values (per channel)
- Suitable for solenoid valves, DC contactors, and indicator lights
- Safety-related shutdown

The module supports the following functions:

- Firmware update
- I&M identification data
- Configuration in RUN
- PROFIenergy

Table 2- 1 Version dependencies of other module functions

Function	Product version of the module as of	Firmware version of the module as of
Value status	1	V1.1.0

You can configure the module with STEP 7 (TIA Portal) and with a GSD file.

## Accessories

The following accessories must be ordered separately:

- Labeling strips
- Color identification labels
- Reference identification label
- Shield connector

## See also

You can find additional information on the accessories in the system manual ET 200SP distributed I/O system (<https://support.industry.siemens.com/cs/ww/en/view/91696622>).

# Connecting

## 3.1 Wiring and block diagram

This section includes the block diagram of the DQ 16×24VDC/0.5A ST module with the terminal assignments for a 1-wire connection.

You can find information on wiring the BaseUnit in the system manual Distributed I/O System ET 200SP (<http://support.automation.siemens.com/WW/view/en/58649293>).

---

**Note**

The load group of the module must begin with a light-colored BaseUnit. Keep this in mind also during the configuration.

---

---


**Note**

The fuse integrated in BaseUnit type A1 may be triggered in the digital output module, rendering the terminals unusable.  
Make sure that you only use digital output modules with BaseUnit type A0 during commissioning.

---

**Wiring: 1-wire connection of actuators**

The following figure shows the block diagram and an example for the terminal assignment of the digital output module DQ 16x24VDC/0.5A ST on the BaseUnit BU type A0 (1-wire connection).

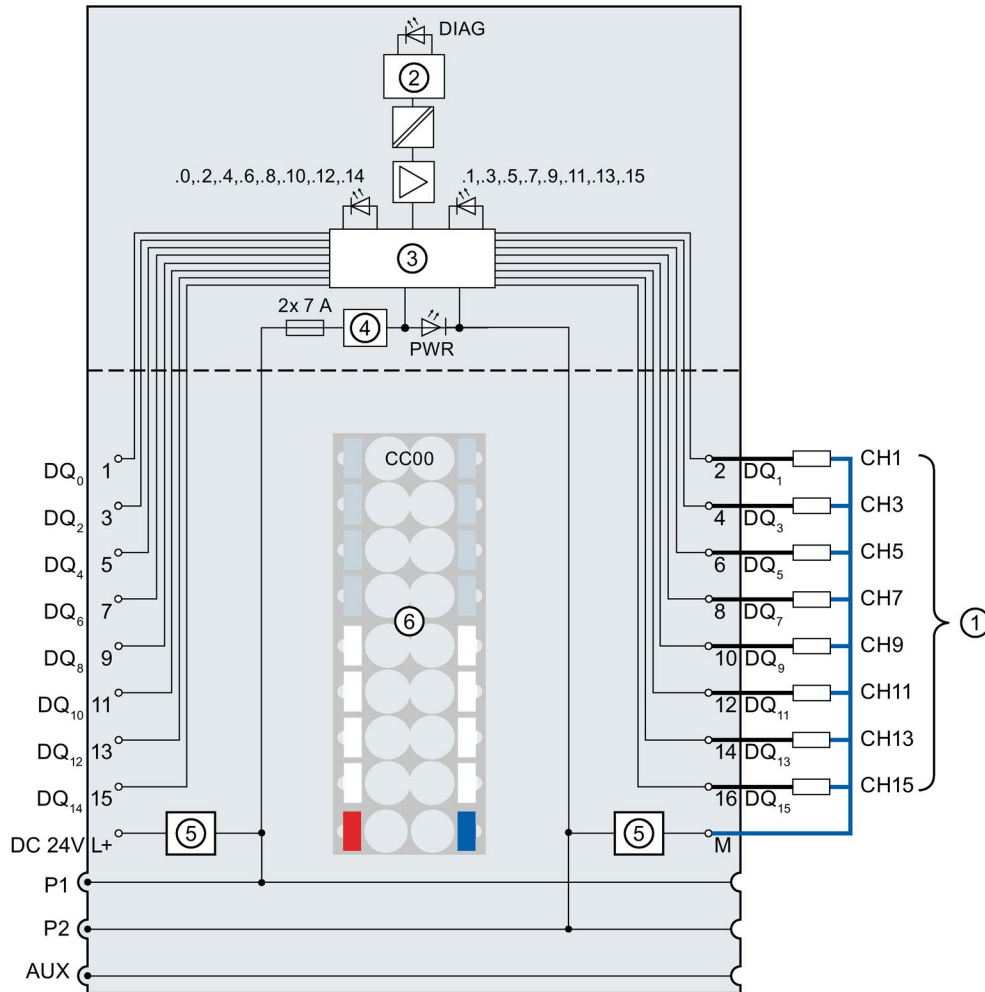

①	1-wire connection	DQ <sub>n</sub>	Output signal, channel n
②	Backplane bus interface	24 V DC	Supply voltage L+ (infeed for light-colored BaseUnit only)
③	Output electronics	M	Ground
④	Polarity reversal protection	P1, P2, AUX	Internal self-assembling voltage buses Connection to left (dark-colored BaseUnit) Connection to left interrupted (light-colored BaseUnit)
⑤	Supply voltage filter circuit (only available with light BaseUnit )	DIAG	Diagnostics LED (green, red)
⑥	Color-coded label with color code CC00 (optional)	.0 to .15	Channel status LED (green)
		PWR	Power LED (green)

Image 3-1 Wiring and block diagram for 1-wire connection of actuators

## Parameters/address space

### 4.1 Parameters

#### Parameters for DQ 16x24VDC/0.5A ST

The effective range of the configurable parameters depends on the type of configuration. The following configurations are possible:

- Central operation with an ET 200SP CPU
- Distributed operation on PROFINET IO in an ET 200SP system
- Distributed operation on PROFIBUS DP in an ET 200SP system

When assigning parameters in the user program, use the "WRREC" instruction to transfer the parameters to the module using the data records; refer to section Parameter assignment and structure of parameter data record (Page 27).

The following parameter settings are possible:

Table 4- 1 Configurable parameters and their defaults (GSD file)

Parameters	Range of values	Default	Parameter reassignment in RUN	Effective range with configuration software, e.g. STEP 7 (TIA Portal)	
				GSD file PROFINET IO	GSD file PROFIBUS DP <sup>1</sup>
Diagnostics: No supply voltage L+	<ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Disable	Yes	Module	Module
Diagnostics: Short-circuit to ground	<ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Disable	Yes	Module	Module
Diagnostics: Short-circuit to L+	<ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Disable	Yes	Module	Module
Diagnostics: Wire break	<ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Disable	Yes	Module	Module
Channel activated	<ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Enable	Yes	Channel	Channel

4.1 Parameters

Parameters	Range of values	Default	Parameter reassignment in RUN	Effective range with configuration software, e.g. STEP 7 (TIA Portal)	
				GSD file PROFINET IO	GSD file PROFIBUS DP <sup>1</sup>
Reaction to CPU STOP	<ul style="list-style-type: none"> <li>• Turn off</li> <li>• Keep last value</li> <li>• Output substitute value 1</li> </ul>	Turn off	Yes	Channel	Module
Potential group	<ul style="list-style-type: none"> <li>• Use potential group of the left module (module plugged into a dark-colored BaseUnit)</li> <li>• Enable new potential group (module plugged into light-colored BaseUnit)</li> </ul>	Use potential group of the left module	No	Module	Module

<sup>1</sup> Due to the limited number of parameters at a maximum of 244 bytes per ET 200SP station with a PROFIBUS GSD configuration, the configuration options are restricted. If required, you can assign these parameters using data record 128 as described in the "GSD file PROFINET IO" column (see table above). The parameter length of the I/O module is 6 bytes.

**Note**

If one of the two parameters "Diagnostics: Short-circuit to L+" or "Diagnostics: Wire break" is enabled and one of these diagnostics occurs, the affected channel is switched off to avoid triggering an undefined load. Note that a diagnostic interrupt can only be generated when diagnostics are enabled. <sup>1</sup>

<sup>1</sup> as of module revision 05

## 4.2 Declaration of parameters

### **Diagnostics: No supply voltage L+**

Enabling of the diagnostics for no or insufficient supply voltage L+.

### **Diagnostics: Short-circuit to ground**

Enabling of the diagnostics if a short-circuit of the actuator supply to ground occurs.

### **Diagnostics: Short-circuit to L+**

Enabling of the diagnostics if a short-circuit of the actuator supply to L+ occurs.

### **Diagnostics: Wire break**

Enabling of the diagnostics if the line to the actuator is broken.

### **Channel activated**

Determines whether a channel is activated or deactivated.

### **Reaction to CPU STOP / substitute value**

Determines the behavior of the module in the event of a CPU STOP.

### **Potential group**

A potential group consists of a group of directly adjacent I/O modules within an ET 200SP station, which are supplied via a common supply voltage.

A potential group begins with a light-colored BaseUnit through which the required voltage is supplied for all modules of the potential group. The light-colored BaseUnit interrupts the three self-assembling voltage buses P1, P2 and AUX to the left neighbor.

All additional I/O modules of this potential group are plugged into dark-colored BaseUnits. You take the potential of the self-assembling voltage buses P1, P2 and AUX from the left neighbor.

A potential group ends with the dark-colored BaseUnit, which follows a light-colored BaseUnit or server module in the station configuration.

### **See also**

You can find additional information in the system manual ET 200SP distributed I/O system (<http://support.automation.siemens.com/WW/view/en/58649293>).

## 4.3 Address space

The module can be configured differently in STEP 7; see following table. Depending on the configuration, additional/different addresses are assigned in the process image output/input.

### Configuration options of DQ 16x24VDC/0.5A ST

You can configure the module with STEP 7 (TIA Portal) or with a GSD file. If you configure the module by means of a GSD file, the configurations are available under various short designations/module names; see the table below. The following configurations are possible:

Table 4- 2 Configuration options with GSD file

Configuration	Short designation/module name in the GSD file	Configuration software, e.g. with STEP 7 (TIA Portal)		
		Integrated in the hardware catalog STEP 7, as of V13, SP1	GSD file PROFINET IO	GSD file PROFIBUS DP
1 x 16-channel without value status	DQ 16x24VDC/0.5A ST V1.0	X	X	X
1 x 16-channel without value status	DQ 16x24VDC/0.5A ST V1.1	---	X	X
1 x 16-channel with value status	DQ 16x24VDC/0.5A ST V1.1, QI	---	X	---

### Evaluating the value status

An additional two bytes are allocated in the input address space if you enable the value status for the digital module. Bits 0 to 15 in these bytes are assigned to a channel. They provide information about the validity of the digital value.

Bit = 1: No fault is present on the channel.

Bit = 0: Channel is deactivated or there is a fault on the module.


If a fault occurs on a channel with this module, the value status for all channels is 0.



## Address space

The following figure shows the assignment of the address space for the DQ 16×24VDC/0.5A ST with value status (Quality Information (QI)). The addresses for the value status are only available if the value status is enabled.

Assignment in the process image output (PIQ)

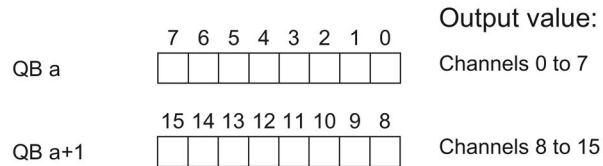

Assignment in the process image input (PII)

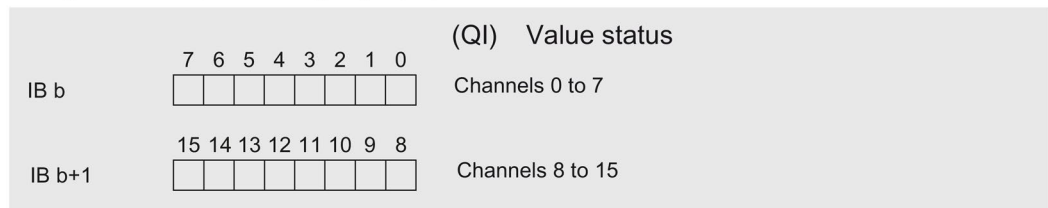


Image 4-1 Address space of DQ 16×24VDC/0.5A ST with value status

## Interrupts/diagnostic alarms

### 5.1 Status and error display

#### LED display

The figure below shows the LED displays of the DQ 16x24VDC/0.5A ST.

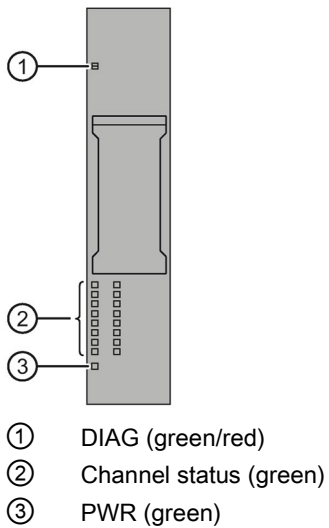


Image 5-1 LED display

## Meaning of the LEDs

The following tables contain the meaning of the status and error displays. Remedial measures for diagnostic alarms can be found in chapter Diagnostic messages (Page 21).

### DIAG LED

Table 5- 1 DIAG LED fault display

DIAG LED	Meaning
□ Off	Backplane bus supply of the ET 200SP not OK
⚡ Flashing	Module not configured
■ On	Module configured and no module diagnostics
⚡ Flashing	Module configured and module diagnostics

### LED channel status

Table 5- 2 LED channel status display

LED channel status	Meaning
□ Off	Channel deactivated or activated and process signal = 0
■ On	Channel activated and process signal = 1

### PWR LED

Table 5- 3 Status display of the PWR LED

PWR LED	Meaning
□ Off	Supply voltage L+ missing
■ On	Supply voltage L+ present

## **5.2 Interrupts**

The digital output module DQ 16×24VDC/0.5A ST supports diagnostic interrupts.

### **Diagnostics interrupts**

The module generates a diagnostic interrupt at the following events:

- Short-circuit
- Wire break
- Parameter assignment error
- Supply voltage missing
- Channel temporarily unavailable

## 5.3 Diagnostic messages

A diagnostics alarm is generated and the DIAG-LED flashes on the module for each diagnostics event. You can read out the diagnostics alarms, for example, in the diagnostics buffer of the CPU. You can evaluate the error codes with the user program.

### Note

#### Parallel connection of two outputs

For parallel connection of two outputs for redundant control of a load, the channel diagnostics "Short-circuit to L+" and "Wire break" must be deactivated.

Table 5- 4 Diagnostics alarms, their meaning and corrective measures

Diagnosics alarm	Error code	Meaning	Solution
Short-circuit	1H	<ul style="list-style-type: none"> <li>Short-circuit of actuator supply to ground</li> <li>Short-circuit of actuator supply to L+</li> </ul>	Correct the process wiring
Wire break	6H	Actuator circuit impedance too high	Use a different actuator type or modify the wiring, e.g. use cables with larger cross-section
		Wire break between the module and actuator	Connect the cable
		Channel not connected (open)	<ul style="list-style-type: none"> <li>Disable diagnostics</li> <li>Connect a resistor to the actuator contacts in the load resistance range</li> </ul>
Parameter assignment error	10H	<ul style="list-style-type: none"> <li>The module cannot evaluate parameters for the channel.</li> <li>Incorrect parameter assignment.</li> </ul>	<ul style="list-style-type: none"> <li>Correct the parameter assignment</li> </ul>
Supply voltage missing	11H	Missing or insufficient supply voltage L+	<ul style="list-style-type: none"> <li>Check supply voltage L+ on the BaseUnit</li> <li>Check BaseUnit type</li> </ul>
Channel temporarily unavailable	1FH	Firmware update is currently in progress or has been canceled. The module does not output any process or substitute values in this state.	<ul style="list-style-type: none"> <li>Wait for firmware update.</li> <li>Restart the firmware update.</li> </ul>

# Technical specifications

## 6.1 Technical specifications

### Technical specifications of the DQ 16×24VDC/0.5A ST

	6ES7132-6BH00-0BA0
<b>General information</b>	
Product type designation	ET 200SP, DQ 16x24VDC/0.5A ST, PU 1
Firmware version	V1.1
<ul style="list-style-type: none"> <li>FW update possible</li> </ul>	Yes
Usable BaseUnits	BU type A0
Color code for module-specific color identification label	CC00
<b>Product function</b>	
I&M data	Yes; I&M0 to I&M3
<b>Engineering with</b>	
STEP 7 TIA Portal can be configured/integrated as of version	V13 SP1
STEP 7 can be configured/integrated as of version	V5.5 / -
PCS 7 can be configured/integrated as of version	V8.1 SP1
PROFIBUS as of GSD version/GSD revision	GSD revision 5
PROFINET as of GSD version/GSD revision	GSDML V2.3
<b>Operating mode</b>	
DQ	Yes
DQ with energy-saving function	No
PWM	No
Oversampling	No
MSO	No
<b>Supply voltage</b>	
Rated value (DC)	24 V
Valid range, low limit (DC)	19.2 V
Valid range, high limit (DC)	28.8 V
Polarity reversal protection	Yes
<b>Input current</b>	
Current consumption, max.	60 mA; no load
<b>Output voltage</b>	
Rated value (DC)	24 V
<b>Power loss</b>	
Power loss, typ.	1 W

<b>6ES7132-6BH00-0BA0</b>	
<b>Address area</b>	
<b>Address space per module</b>	
Address space per module, max.	2 bytes; + 2 bytes for QI information
<b>Digital outputs</b>	
Number of outputs	16
Sinking output	No
Sourcing output	Yes
Short-circuit protection	Yes
<ul style="list-style-type: none"> <li>Response threshold, typ.</li> </ul>	0.7 to 1.3 A
Limitation of inductive shutdown voltage to	Typ. L+ (-50 V)
Control of a digital input	Yes
<b>Switching capacity of outputs</b>	
With resistive load, max.	0.5 A
With lamp load, max.	5 W
<b>Load resistance range</b>	
Low limit	48 Ω
High limit	12 kΩ
<b>Output current</b>	
For signal "1" rated value	0.5 A
For signal "0" residual current, max.	0.1 mA
<b>Output delay with resistive load</b>	
"0" to "1", typ.	50 μs
"1" to "0", typ.	100 μs
<b>Parallel connection of two outputs</b>	
For increased performance	No
For redundant control of a load	Yes
<b>Switching frequency</b>	
With resistive load, max.	100 Hz
With inductive load, max.	2 Hz
With lamp load, max.	10 Hz
<b>Total current of the outputs</b>	
Current per channel, max.	0.5 A
Current per module, max.	8 A
<b>Total current of the outputs (per module)</b>	
Horizontal installation	
<ul style="list-style-type: none"> <li>Up to 40 °C, max.</li> </ul>	8 A
<ul style="list-style-type: none"> <li>Up to 50 °C, max.</li> </ul>	6 A
<ul style="list-style-type: none"> <li>Up to 60 °C, max.</li> </ul>	4 A
Vertical installation	
<ul style="list-style-type: none"> <li>Up to 30 °C, max.</li> </ul>	8 A
<ul style="list-style-type: none"> <li>Up to 40 °C, max.</li> </ul>	6 A
<ul style="list-style-type: none"> <li>Up to 50 °C, max.</li> </ul>	4 A

6.1 Technical specifications

<b>6ES7132-6BH00-0BA0</b>	
<b>Cable length</b>	
Shielded, max.	1000 m
Unshielded, max.	600 m
<b>Isochronous mode</b>	
Isochronous mode (application synchronized up to terminal)	No
<b>Interrupts/diagnostics/status information</b>	
Substitute values can be applied	Yes
<b>Interrupts</b>	
Diagnostics interrupt	Yes
<b>Diagnostics alarms</b>	
Diagnostics	Yes
Monitoring of the supply voltage	Yes
Wire break	Yes; module by module
Short-circuit	Yes; module by module
Group error	Yes
<b>Diagnostics indicator LED</b>	
Monitoring of the supply voltage (PWR LED)	Yes; green PWR LED
Channel status display	Yes; green LED
For channel diagnostics	No
For module diagnostics	Yes; green/red DIAG LED
<b>Electrical isolation</b>	
<b>Electrical isolation of channels</b>	
Between the channels	No
Between the channels and backplane bus	Yes
<b>Permitted potential difference</b>	
Between different circuits	75 V DC / 60 V AC (basic insulation)
<b>Insulation</b>	
Insulation tested with	707 V DC (type test)
<b>Dimensions</b>	
Width	15 mm
<b>Weights</b>	
Weight, approx.	28 g



## Safety-related shutdown

---

### **Note**

The digital output module DQ 16x24VDC/0.5A ST supports safety-related shutdown in connection with a fail-safe power module F-PM-E 24VDC/8A PPM ST:

- SIL according to IEC 61508: 2
  - Highest attainable safety class in safety mode, performance level according to EN ISO 13849-1: d
- 

## Residual current for signal state "0"

---

### **Note**

#### **Residual current for signal state "0"**

Due to the Diagnostics: Wire break function, there is a low level of residual current in the "0" signal state at the output, which may cause the display diodes to flicker.

This residual current does not depend on the setting for the Diagnostics: Wire break parameter.

---

### Derating trend

The following figure show the load current derating with horizontal and vertical mounting positions.

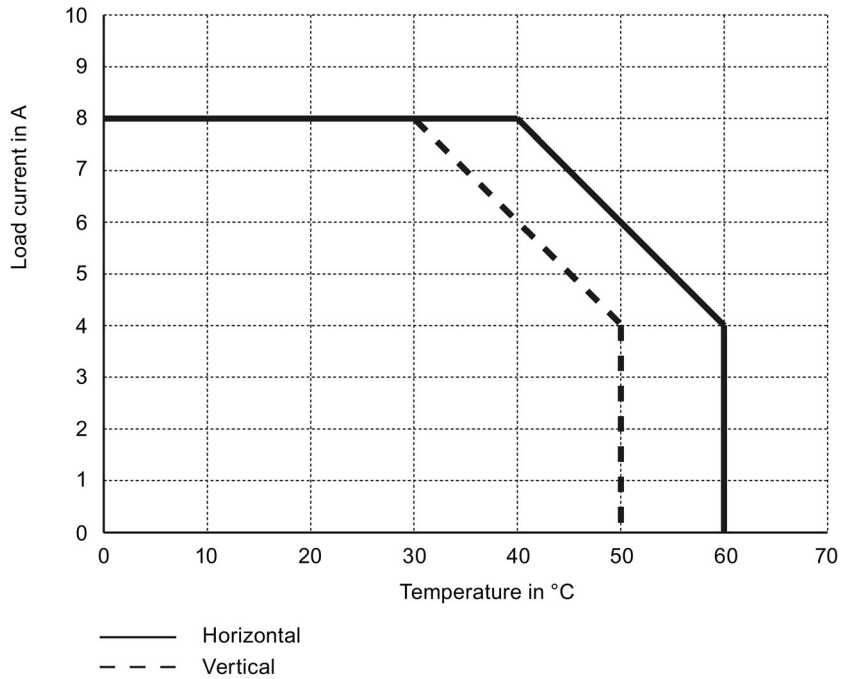


Image 6-1 Load current for mounting position

### Dimension drawing

See manual ET 200SP BaseUnits

<http://support.automation.siemens.com/WW/view/en/58532597/133300>

## Parameter data record

### A.1 Parameter assignment and structure of parameter data record

The data record of the module has an identical structure, regardless of whether you configure the module with PROFIBUS DP or PROFINET IO. With data record 128, you can reconfigure the module in your user program regardless of your programming. This means that you can use all the functions of the module even if you configured it via PROFIBUS-GSD.

#### Parameter assignment in the user program

You can change the parameters of the module in RUN.

#### Changing parameters in RUN

The "WRREC" instruction is used to transfer the parameters to the module using data record 128. The parameters set in STEP 7 are not changed in the CPU, which means that the parameters set in STEP 7 will be valid again after a restart.

#### Output parameter STATUS

If errors occur when transferring parameters with the "WRREC" instruction, the module continues operation with the previous parameter assignment. The STATUS output parameter contains a corresponding error code.

You will find a description of the "WRREC" instruction and the error codes in the STEP 7 online help.

Structure of data record 128

**Note**

Channel 0 includes the diagnostics enable for the entire module.

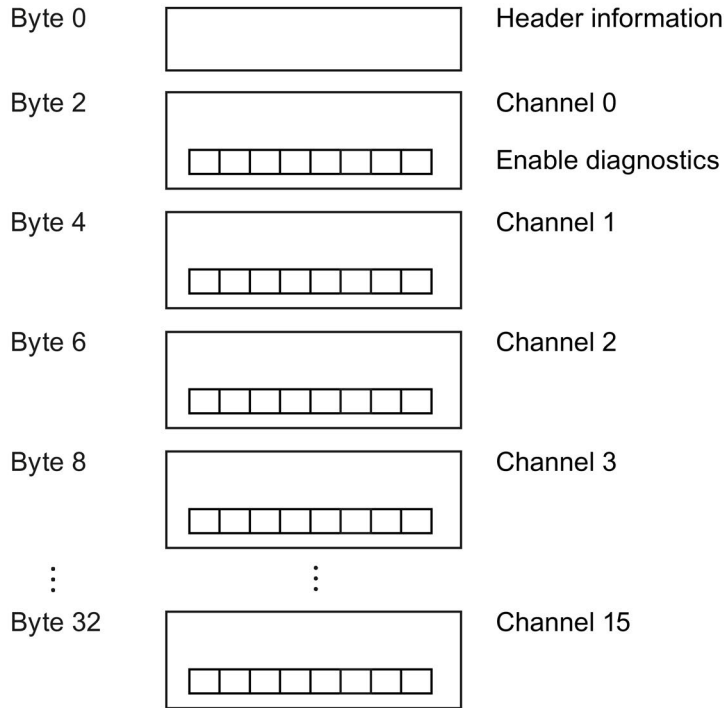


Image A-1 Structure of data record 128

**Header information**

The figure below shows the structure of the header information.






Image A-2 Header information

## Parameters

The figure below shows the structure of the parameters for channels 0 to 15.

You enable a parameter by setting the corresponding bit to "1".

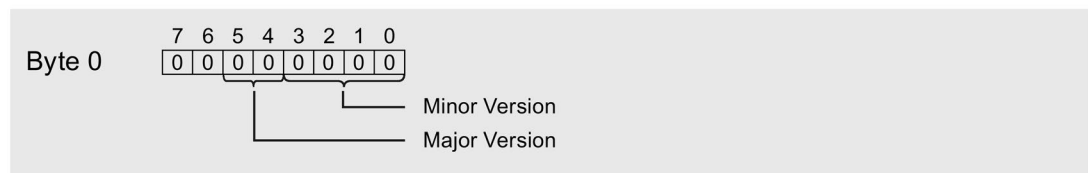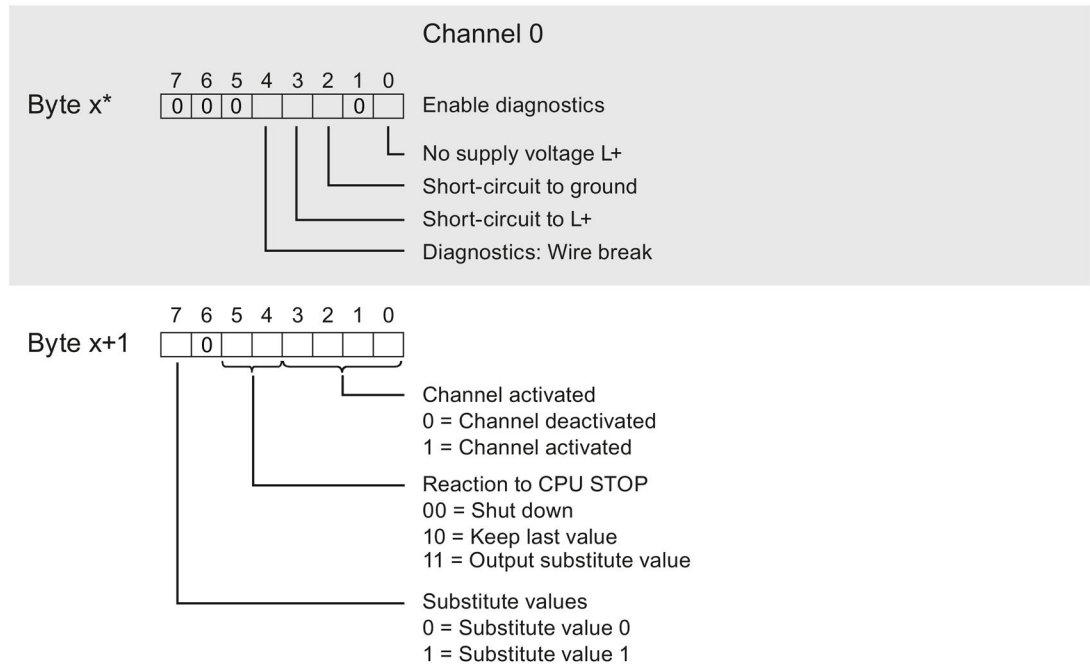

\*  $x = 2 + (\text{channel number} \times 2)$ ; channel number = 0 to 15

Image A-3 Structure byte x to x+1 for the channels 0 to 15

**Error transmitting the data record**

The module always checks all values of the data record to be sent. The module applies the values from the data record only when all values have been transmitted without errors.

The WREC instruction for writing data records returns the appropriate error code if there are errors in the STATUS parameter.

The following table shows the module-specific error codes and their meaning for parameter data record 128.

Error code in the STATUS parameter (hexadecimal)				Meaning	Solution
Byte 0	Byte 1	Byte 2	Byte 3		
DF	80	B0	xx	Number of the data record unknown	Enter valid number for data record.
DF	80	B1	xx	Length of the data record incorrect	Enter valid value for data record length.
DF	80	B2	xx	Slot invalid or unavailable	<ul style="list-style-type: none"> <li>• Check the station to determine whether the module is plugged in or pulled.</li> <li>• Check assigned values for the parameters of the WREC instruction.</li> </ul>
DF	80	E0	xx	Wrong version or error in the header information	Correct the version, length and number of parameter blocks.
DF	80	E1	xx	Parameter error	Check the parameters of the module